

Automated environment controllable stress-controllable 7D soil column for measuring transient hydraulic properties



- ◆ /
- ◆
- ◆ SDPFs SDSWCCs
- ◆ SDPFs SDSWCCs
- ◆ , K_0 SDPF
- ◆
- ◆ SDSWCC



Geo-Experts

IPM
SDPF

h_{z_i,t_j}
and D)

t_j ($j = 1, 2$)

z_i ($i = A, B, C$)

VWC


PWP

SDSWCC

PWP

VWC

LVDT

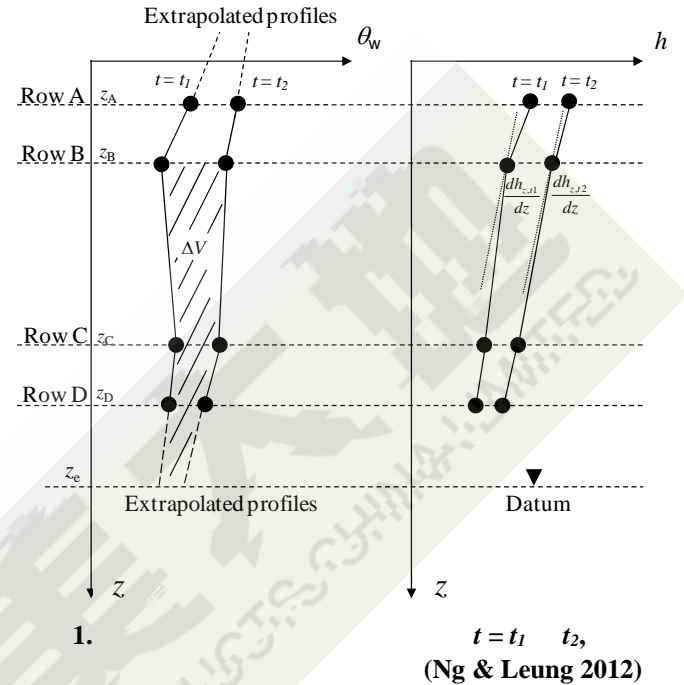

- IPM

$$k_{zB,tave} = - \frac{v_{zB,tave}}{i_{zB,tave}} \quad (3)$$

$$v_{zB,tave} = - \frac{\Delta V}{t_2 - t_1} + v_{ze,tave} \quad (1)$$




$\Delta V = \theta_w(z, t) \left(\frac{z_B}{z_A - z_B} + \frac{z_B}{z_B - z_C} \right) - \theta_w(z, t) \left(\frac{z_B}{z_A - z_B} + \frac{z_B}{z_B - z_C} \right)$
 $t_{ave} = (t_1 + t_2)/2$
 $v_{ze,tave} = v_{ze}$

Geo-Experts

(Mariotte's bottle.)

$$i_{zB,tave} = \frac{1}{2} \left(\frac{dh_{zB,t1}}{dz} + \frac{dh_{zB,t2}}{dz} \right)$$

$$= \frac{1}{4} \left[\left(\frac{h_{zA,t1} - h_{zB,t1}}{z_A - z_B} + \frac{h_{zB,t1} - h_{zC,t1}}{z_B - z_C} \right) + \left(\frac{h_{zA,t2} - h_{zB,t2}}{z_A - z_B} + \frac{h_{zB,t2} - h_{zC,t2}}{z_B - z_C} \right) \right] \quad (2)$$

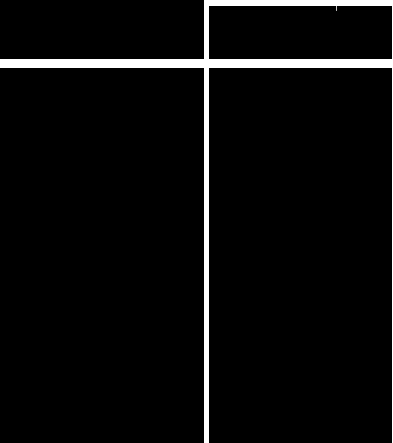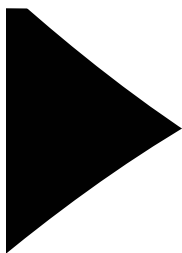

1	*		
		:	150 mm
		:	190 mm
		:	1000 mm
2	VWC	:	60 mm
3		:	5 mm
4	()		
i	<i>k</i>	:	150 mm
		:	200 mm
ii		:	5 kg
		:	0.01 g
5		:	10 kN
		:	50 mm
		:	0 – 450 kPa
		:	0 – 1000 kPa
6	()	:	2 MPa
		:	0.5 mV/V
		:	2 % RO
		:	1 channel, 4 dig


*) ()
 ** VWC PWC 6.

中国总代理.



美大地

美大地 仪器仪表

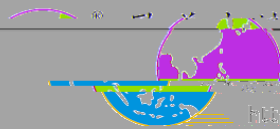

EARTH PRODUCTS CHINA LIMITED

<http://www.epc.com.cn>

<http://www.epcn.com>

沈阳 电话: (024)2324 2365 传真: (024)2324 2359

成都 电话: (028)8675 8783 传真: (028)8674 3787

广州 电话: (020)8336 1533 传真: (020)8336 2080

武汉 电话: (027)8788 8888 传真: (027)8788 8888

福州 电话: (0591)8788 8118 传真: (0591)8788 8118

北京 电话: (010)6788 8888 传真: (010)6788 8888